

Camera Maker	Camera Model	DCR-2020PRO Telephoto2.2x	DCR-1850PRO Telephoto1.85x	DCR-1540PRO Telephoto1.54x	DCR-720 Wideangle 0.72x	DCR-6600PRO Wideangle 0.66x	DCR-5000 Wideangle 0.5x	DCR-CF185PRO 185°Fish-Eye	DCR-FE180PRO 180°Fish-Eye	DCR-250/DCR-150 Macro
Canon	Powershot Pro1	RA6258 (Included) *10*3	/	RA5258*10	/	/	/	IE6257 * 10	IE6257 * 10	Universal adapter (included) * 10
	Powershot G6	RA6258 (Included) *11*3	RA5258 * 11	RA5258 * 11	RA5258 * 11	RA5258 * 11*3	RA5258 * 11	RA6258 (included) * 11	RA6258 (included) * 11	Universal adapter (included) * 11
	Powershot G5/G3	RA6258 (Included) *1*3	RA5258 * 1	RA5258 * 1	RA5258 * 1	RA5258 * 1	RA5258 * 1	RA6258 (included) * 1	RA6258 (included) * 1	Universal adapter (included) * 1
	Powershot A95/A80	RA6252 (Included)*12	*12	*12	*12	*12	*12	RA6252 (included)*12	RA6252 (included)*12	Universal adapter (included) * 12
	Powershot S1 IS	RA6252 (Included)*14	/	*14	*14	*14	*14	RA6252 (included)*14	RA6252 (included)*14	Universal adapter (included) * 14
CASIO	EX-P700/P600	RA6258 (Included) *15*3	RA5258 *15	RA5258*15	RA5258*15	RA5258*15	RA5258*15	RA6258 (included)*15	RA62598 (included)*15	Universal adapter (included) * 15
	QV-5700/4000	RA6252(Included)+ RT52475 *3	RT52475	RT52475	RT52475	RT52475	RT52475	RT52475	RT52475	RT52475
Panasonic	Lumix DMC-FZ20/FZ10	RA6252 (Included)+	/	RT5264P	RT5264P	RT5264P	RT5264P	RT5264P	RT5264P	RT5264P
	Lumix DMC-FZ3/FZ2/FZ1	RA6252(Included)+ RA5255 *2	/	RA5255 * 2	RA5255 * 2	RA5255 * 2	RA5255 * 2	RA5255 * 2	RA5255 * 2	Universal adapter (included) * 2
FUJIFILM	FinePix S5000	RA6252(Included)+ RT5249	RT5249 *6	RT5249	RT5249	RT5249	RT5249	RT5249	RT5249	RT5249
	FinePix S20Pro/S7000/S602	RA6252(Included)+ RT5255	RT5255	RT5255	RT5255	RT5255 * 3	RT5255	RT5255	RT5255	RT5255
	FinePix S304/3800	RA6252(Included)+ RA5255 *4	RA5255 * 4	RA5255 * 4	RA5255 * 4	RA5255 * 4	RA5255 * 4	RA5255 * 4	RA5255 * 4	Universal adapter (included) * 4
KONICA MINOLTA	DiIMAGEZ3	RA6252(Included)+ RT5246Z3	/	RT5246Z3	RT5246Z3	RT5246Z3	RT5246Z3	RT5246Z3	RT5246Z3	RT5246Z3
	DiIMAGE Z1/Z2	RA6252(Included)+ RT5245MD	/	RT5245MD	RT5245MD	RT5245MD	RT5245MD	RT5245MD	RT5245MD	RT5245MD
	DiIMAGE A200/A2/A1/7Hi/7i/7	RA6252(Included)+ RA5249 *3	/	RA5249 * 3	/	/	/	RA5249	RA5249	RA5249 * 3
Nikon	CoolPix8800	RT6265T/W	/	RA6252+ RT6265T/W	/	/	/	RT6265T/W	RT6265T/W	RT6265T/W
	CoolPix 5700/8700	RA6252(Included)+ RT5253NT	/	RT5253NT	RT5253NW	RT5253NW*6	/	RT5253NW	RT5253NW	RT5253NT
	CoolPix 5400	RA6252(Included)+ RT5245NT *3	RT5245NT	RT5245NT	/	/	/	RT5245 *7	RT5245 *7	RT5245NT
	CoolPix 5000	RA6252(Included)+ RT5246N	RT5246N	RT5246N	/	/	/	RT5246N	RT5246N	/
Olympus	C-8080WideZoom	RA6252(Included)+ RT5267CT	RT5267CT	RT5267CT	/	/	/	RT6267CW	RT6267CW	RT5267CT*3
	E20/E20P/E20N/E10	Direct Mount *3	RA5262 * 3	RA5262 * 3	/	/	/	Direct Mount	Direct Mount	Universal adapter (included) * 3
	C-5060WideZoom	RA6252(Included)+ RT5248	RT5248	RT5248	/	/	/	IE6252+RT5248	IE6252+RT5248	RT5248
	C-5050/3100Z	RA6252(Included)+ RT5241 *3	RT5241	RT5241	RT5241	/	/	RT5241	RT5241	RT5241
	C-770/760/755/745UZ	RA6252(Included)+ RT5245C7	/	RT5245C7	RT5245C7	RT5245C7	RT5245C7	RT5245C7	RT5245C7	RT5245C7
SONY	DSC-V3	RA6252(Included)+ RT5248V3*3	RT5248V3	RT5248V3	/	/	/	RT5248V3	RT5248V3	RT5248V3
	DSC-V1	RA6252(Included)+ RT5245VT *3	RT5245VT	RT5245VT	RT5245VW	RT5245VW	RT5245VW	RT5245VT *8	RT5245VT *8	RT5245VT
	DSC-F828	RA6258 (Included) *3	RA5258 * 6	RA5258	/	/	/	RA6258 (included)	RA6258 (included)	Universal adapter (included)*3
	DSC-F717/F707	RA6258 (Included) *3	RA5258 * 6	RA5258	RA5258	RA5258	RA5258	RA6258 (included)	RA6258 (included)	Universal adapter (included)

\* 1: Use with Canon LA-DC58B adapter. \* 2 : Use with FZ2/1 Original adapter. \* 3 : The lens will cause vignetting (darkening at corners). \* 4 : Use with Fujifilm original hood adapter. \* 5 : Set the camera in "Super Macro Mode" when use with C-4100Z. \* 6 : Set the camera's F stop slower than F5.6.(F5.6/F6.3/F7.1/F8.0) \* 7 : Use RT5245 \* 8 : Use RT5245VT \* 9 : Use RT5264P \* 10: Use with Canon LA-DC58C adapter. \* 11: Use with Canon LA-DC58D adapter. \* 12: Use with Canon LA-DC52D adapter.\* 13: Use with Canon LA-DC52C adapter. \* 14: Use with LAH-DC10 adapter. \* 15: Use with Casio LU-60A Tele adapter